


How to correctly perform continuity test of (PE) protective earth connection

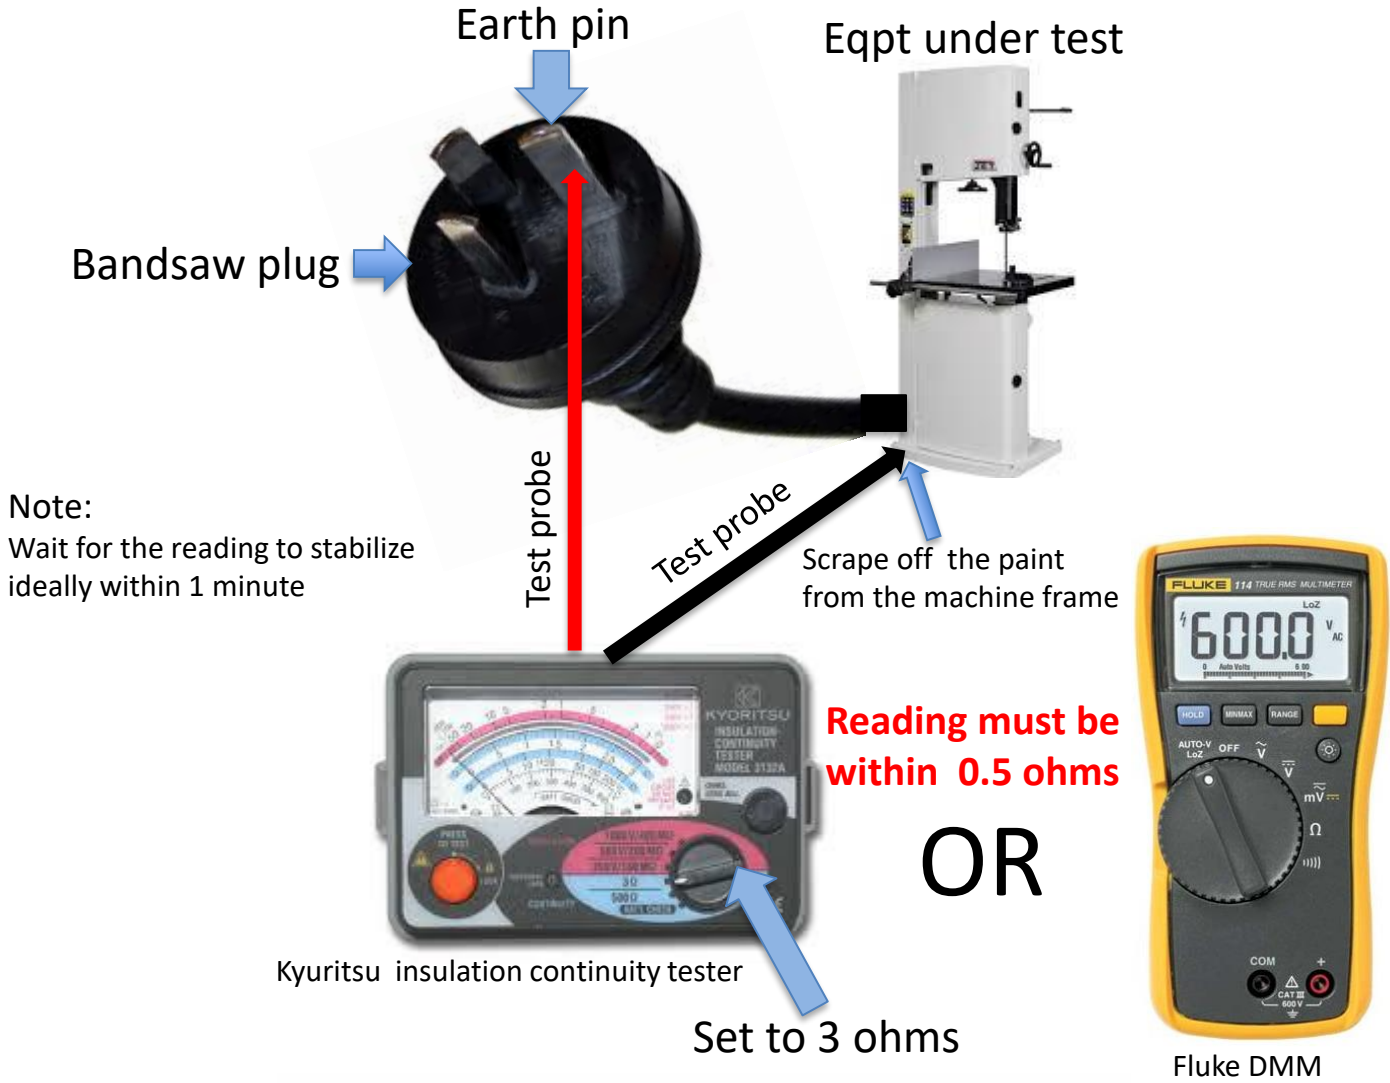

Earth Continuity Test

- Any Class I equipment with exposed metal parts must have its protective earth checked to ensure it is continuous from the earth pin of the plug to any exposed metal. The resistance must not be greater than $.5\Omega$.

