

For further information

Publications can be ordered through the ACCC Infocentre or downloaded from the ACCC website.

Safety alert brochures:

Babies dummies
Baby bath aids
Baby walkers
Bunk beds
Cots
Hot water bottles
Household furniture hazards for kids
Prams and strollers
Toys

Safety guides:

Keeping baby safe: a guide to nursery furniture
Keeping baby safe—DVD
Safe toys for kids

ACCC contacts

ACCC Infocentre 1300 302 502
For information in languages other than English,
call 131 450 and ask for 1300 302 502.

www.accc.gov.au

Callers who are deaf or have a hearing or speech
impairment can contact the ACCC through the
National Relay Service www.relayservice.com.au

TTY or modem users—
phone 133 677 and ask for 1300 302 502.

Voice-only (speak and listen) users—
phone 1300 555 727 and ask for 1300 302 502

Remember

**Keep young children
away from treadmills.**

**Always supervise older
children if they are using
a treadmill.**

For further information contact
ACCC Infocentre on 1300 302 502
www.accc.gov.au
GPO Box 3131 Canberra ACT 2601

Important notice. The information in this brochure is general in nature and may not be relevant to your specific circumstances. While the ACCC has made every reasonable effort to provide current and accurate information, readers should be aware that the ACCC accepts no liability for any loss or damage whatsoever attributable to reliance upon any of that information. Nothing in this brochure should replace professional advice. The ACCC recommends that users exercise their own skill and care when using the information in this brochure.


© Commonwealth of Australia 2008



Australian
Competition &
Consumer
Commission

SAFETY ALERT

Domestic Treadmills

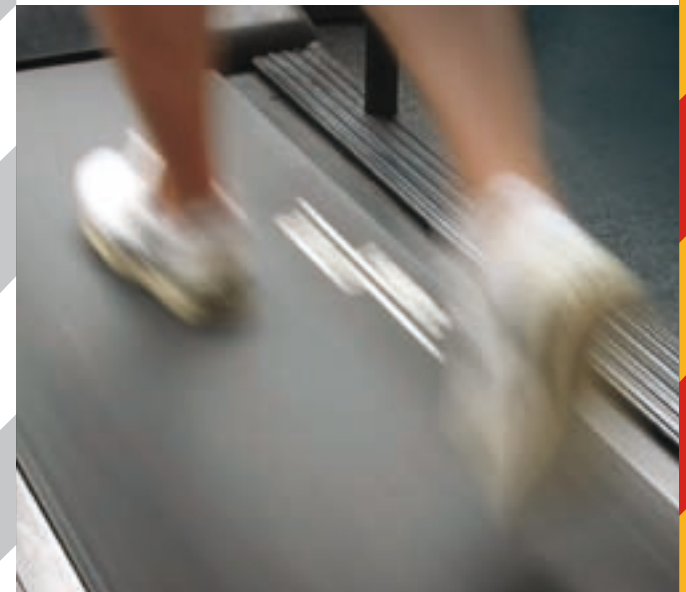

Produced by the ACCC 10/08 ISBN 978 1 921393 90 7

SAFETY HAZARD

Domestic treadmills

Over the last three years, more than 100 serious accidents associated with treadmills have occurred in Australian homes.

Treadmill exercise can be a convenient way to keep in shape and improve your aerobic fitness at home.

However, if you use a treadmill at home and have young children—your child could be at risk.

Young children are most at risk of injury from treadmills. Injuries occur when a child contacts the walking tread while it is in motion, causing serious skin burns and in some cases requiring the child to undergo a skin graft.

Children have climbed on treadmills in use, causing them to be thrown off. In one case a folded treadmill fell on top of a young child.

Protect your children—follow the safety guidelines in this brochure.

How can a child be injured by a treadmill?

Most serious injuries occur when children try to touch or climb on a treadmill while it is being used. They may approach the treadmill without the user noticing until it's too late.

If a child touches the walking belt while it is in use, they can receive serious friction burns very quickly, or their fingers and hand can get caught in the gap between the belt and the frame or the floor. Injuries generally occur faster than the treadmill user can react.

How do I prevent injury?

It is best to use your fitness machines in an area that is not accessible to a young child.

If you can't keep the machine in a child-free area, either place child-proof barriers around the machine or situate it in a position where you can easily see a child approaching you.

Always keep young children away from fitness machines when they are in use and make sure they can't reach any moving part.

Make your home a safe place for children

SAFETY CHECKLIST

Before you buy

- ✓ Select a machine with protective covers to keep little fingers and hands away from as many moving parts as possible.
- ✓ Check that the machine has a safety stop switch to stop it quickly in case of accident.

Safety at home

- ✓ Understand how to operate the treadmill and learn about the safety functions of the machine.
- ✓ Consider placing the treadmill in a separate room away from young children. If this is not possible, use safety barriers to keep children away from the machine.
- ✓ Before using the treadmill ensure children cannot reach or touch the machine.
- ✓ Keep the area around the treadmill clear of objects.
- ✓ Wear protective shoes suitable for walking or running when you are using the treadmill.
- ✓ Keep the treadmill unplugged from power when it is not in use.
- ✓ When storing the treadmill, especially if it is folded, place it well away from a child's reach.

Domestic Treadmills

SAFETY ALERT



Remember

Do not allow young children near a moving treadmill.

Always supervise older children if they are using a treadmill.